



TILEWARE
PRODUCTS



**FASTENER SYSTEM ONLY WORKS WITH WOOD BLOCKING
(DO NOT USE WALL ANCHORS WITH THIS SYSTEM)**

For 1/2"
Materials Only


Promessa™ Series Extra Deep Corner Basket

Revised: 10/23/17

Installation Procedures (Gypsum Wallboard/Drywall Surfaces)

**Model G100-050
Extra Deep Corner Basket**

G100-050-PC

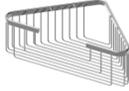


G100-050-BN



G100-050-ORB



STEP 1 Understand Marking Template

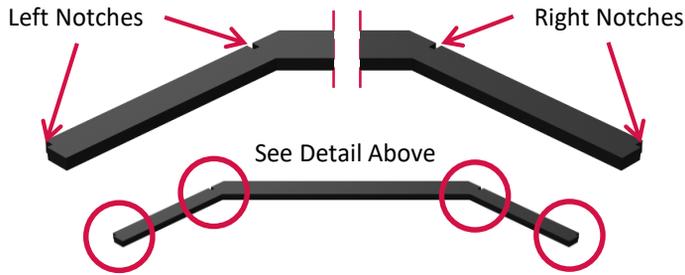

- Each basket kit comes with (1) Marking Template. The Marking Template has notches to assist with all GWB (Gypsum Wallboard) corner basket installations and ensures that each basket mounts properly.
- Use both the inside & outside notches (Left & Right) to assist when installing Extra Deep Corner Basket.

Technical Fact:

Marking Template acts as a precise measurement tool


Not using Marking Template will result in basket mounting failure

STEP 2 Insert Blocking


- Insert no less than 2"x 4" wood blocking.

Warning: FASTENER SYSTEM ONLY WORKS WITH WOOD BLOCKING


(DO NOT USE WALL ANCHORS WITH THIS SYSTEM)

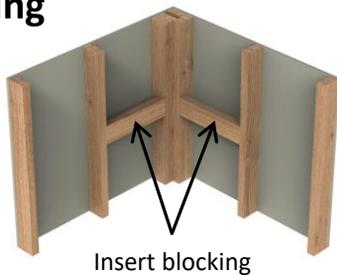

STEP 3 Locate Wood Blocking

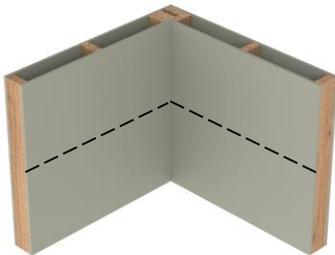


STEP 4 Using Marking Template

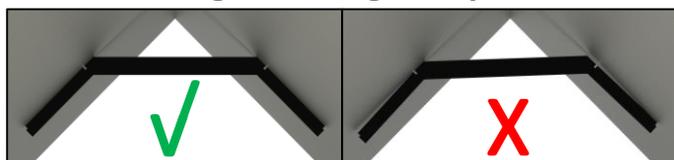


- Situate Marking Template so both ends are flush with corner walls (see above).

STEP 5 Determine Height Of Basket

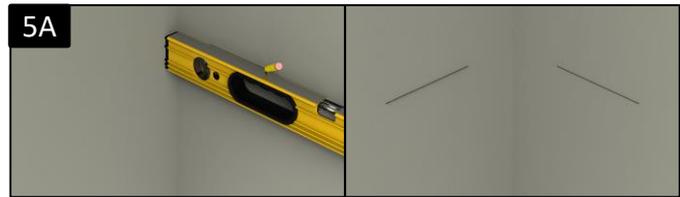


- Measure from floor to determine height of basket (not illustrated).
- 5A - Using a level, draw a horizontal line on both left and right corner walls.

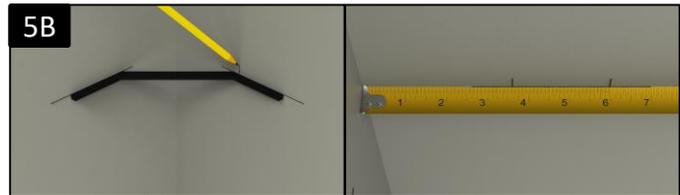

- 5B - Situate top of Marking Template even with lines drawn in 5A. Draw a vertical pencil line in the middle of both the inside and outside notch spaces.
- The center of both inside and outside notch pencil lines should measure precisely 3-5/8" and 6" from the corner of the wall.

STEP 6 Drill 3/8" Holes

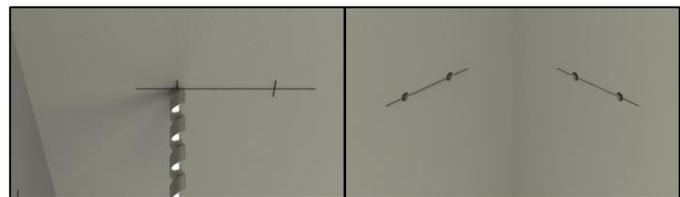


Warning: Do not drill deeper than the thickness of gypsum wallboard (drywall) material.

- Drill a 3/8" hole (left and right sides) in gypsum wallboard (drywall) to accommodate spacers in STEP 7. Place some tape on the drill to mark drill depth. (Example: If wallboard material is 1/2" thickness, only drill that depth. Do not drill into wood blocking). See 'Side view' diagram above.




STEP 7 Insert Spacers

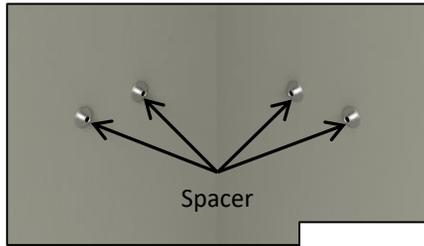


• Insert both left and right spacers into drilled holes. Press in firmly so that flange mounts flush with gypsum wallboard (drywall) material.

• After inserting spacers, use a tape measure (as illustrated) to ensure center of both inside and outside spacers are 3-5/8" and 6" to corner of wall.

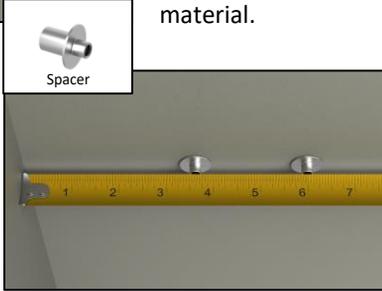

STEP 9 Mount Basket With Screws

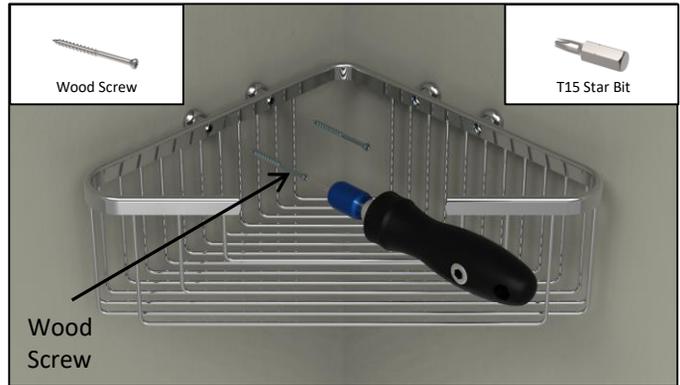


• Mount basket with stainless steel wood screws, both left and right sides, with provided star drive bit in kit (or any T15 star drive bit) using a multi-bit screwdriver or power drill.

Technical Fact:


Spacer prevents gypsum wallboard (drywall) from collapsing at drilled hole. Additionally, protects from over-tightening screw which can draw the accessory into the gypsum wallboard (drywall) material.

STEP 8 Install Ferrules

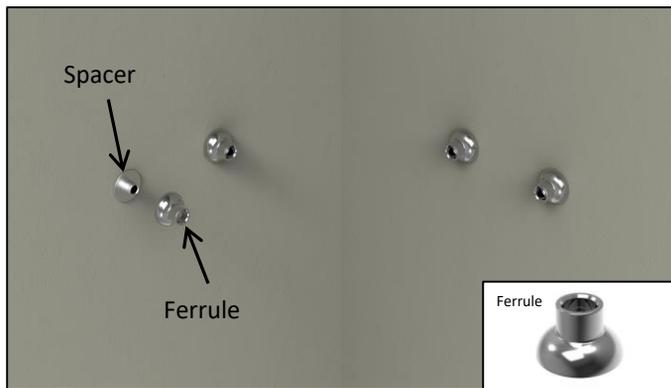

• Simply slip ferrules over spacers.

STEP 10 Install Decorative Plugs

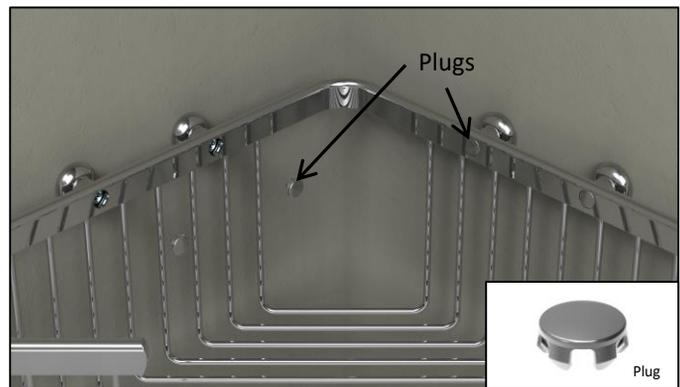

• Install decorative plugs. Easier if all prongs enter hole then press firmly. Installation complete.

TileWare Products
PO Box 793, Hickory, NC 28603
Technical Support: 828-322-9273
Email: info@tilewareproducts.com
www.tilewareproducts.com

Thank you for using our products!

Extra Deep Corner Basket Parts List

Extra Deep Corner Basket Quantity 1 per kit	Spacer quantity 4 per kit	Standard Ferrule quantity 4 per kit	Decorative Plug quantity 4 per kit	Wood Screw quantity 4 per kit	Star Drive Bit-T15 quantity 1 per kit
255289	C200-044	255245	243168	C200-048	C200-049